

Photogenic MCD-TXC Remote (Part # 907011)

16 Channel Transmitter with Power Control for Photogenic Matrix MCD400R



Weight: Remote = 27g
Battery = 3g
Remote + Battery = 30g (1.1 Ounces)

Size: L=60mm x W=40mm x H=23mm (2.36" x 1.57" x 0.90")

Range: 15 to 75 meters (50 to 250 feet) depending on orientation and environment.

Battery: CR2032, 3 Volt, Lithium coin.

Test Switch: When the Test Switch button is pressed, a signal is transmitted, on the selected radio channel number, to flash the MCD400R unit.

Group Switch: Four LEDs numbered 1 to 4 (Group 1, 2, 3, 4) indicate which MCD400R group (GA, Gb, Gc, Gd) is selected. The selected Group LED will briefly illuminate when the Group Switch button is pressed and released. If the Group Switch button is pressed and released multiple time, a different Group LED is selected.

Up, Down: The Up and Down push buttons adjust the Flash or Model light output levels (1.0 to 6.0 F stops) for the selected MCD400R Group. Each time the Up or Down button is pressed and released, the Flash output level is changed by 1/10 of a stop. When the Up button is pressed and held for three seconds, the Model light switches ON. Now, the Model light level can be adjusted in 1.0 increment by pressing and releasing the Up or Down button. After five seconds of inactivity, the Up and Down buttons revert back to Flash adjust mode. If the Down button is held for three seconds, the Model light switches OFF.

Flash Sync: Standard camera Hot Shoe connector, and a 3.5mm jack for a PC cable (included).

Channels: 16 Radio channels can be selected by setting the four dip switches (located in the battery compartment) according to the following table:



Ch #	Sw1	Sw2	Sw3	Sw4
0	off	off	off	off
1	on	off	off	off
2	off	on	off	off
3	on	on	off	off
4	off	off	on	off
5	on	off	on	off
6	off	on	on	off
7	on	on	on	off
8	off	off	off	on
9	on	off	off	on
A	off	on	off	on
b	on	on	off	on
c	off	off	on	on
d	on	off	on	on
E	off	on	on	on
F	on	on	on	on